


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

⚠ DISCONNECT THE MAIN LINE BEFORE WIRING SECONDARY CONNECTORS.

INSTALLATION IN CONCRETE WITH BACKBOX (CAS.3254) - REMOTE DRIVER (REM) (24V)

- A - REMOVE THE ELBOW FROM THE TUBE.
- B - USE (2) NAILS (**NOT INCLUDED**) TO INSTALL THE TUBE TO THE PLYWOOD. BACK BOX ASSEMBLY MUST BE FLUSH AND PERPENDICULAR TO THE PLYWOOD. BACK BOX CAN BE PLACED IN ANY DIRECTION AS SHOWN BELOW.
- C - REINSERT THE ELBOW IN THE TUBE AND INSTALL THE CONDUIT (**NOT INCLUDED**). USE THE CABLE TIE (**INCLUDED**) TO HOLD IT IN PLACE.
- D - POUR CONCRETE IN THE FORMWORK WHERE THE BACK BOX IS PLACED. WAIT FOR THE CONCRETE TO DRY. WHEN YOU REMOVE THE FORMWORK, THE COVER WILL COME OUT.
- E - MAKE WIRE CONNECTIONS IN THE CONNECTION BOX (**FOLLOWING POLARITY MARKING**) AND INSERT THE FIXTURE IN THE BACK BOX UNTIL IT CLICKS IN PLACE.

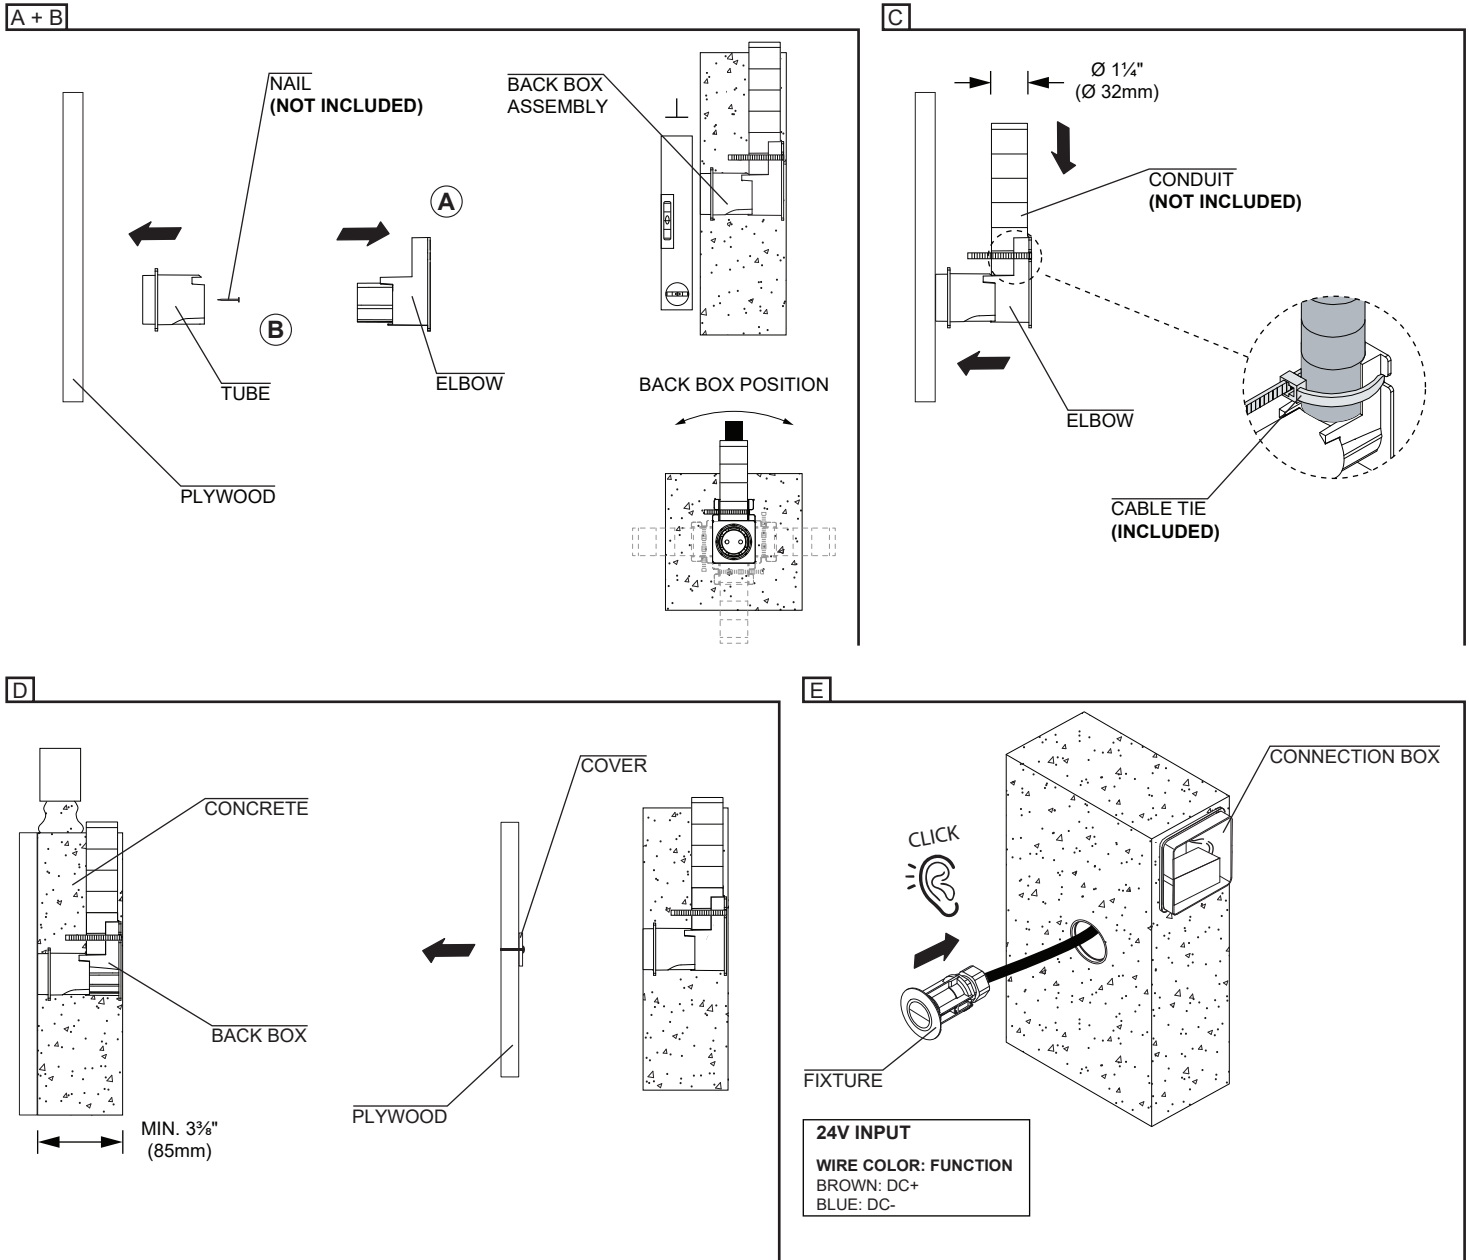

MAINTENANCE

A - INSERT A FLAT HEAD SCREW DRIVER UNDER THE FIXTURE TRIM AS SHOWN BELOW AND GENTLY PRIED THE FIXTURE FROM THE WALL.

A

