MODELS: S5314, S5334, S5339, S5374, S5379


IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

### NEW CONCRETE INSTALLATION PREPARATION (WITH FLANGE ACCESSORY S5310, S5350, S6309)

- A- PREPARE THE DESIRED DRAINING USING GRAVEL UNDER THE FLANGE
- B- INSTALL AN APPROPRIATE ELECTRICAL CONDUIT (NOT INCLUDED) THROUGH THE FLANGE.
- C- FEED CABLE THROUGHT THE ELECTRICAL CONDUIT.
- D- POUR CONCRETE IN AND MAKE SURE THAT IT IS LEVELED AD IT SITS 5MM UNDER THE TOP OF THE FLANGE
- E- REMOVE THE PROTECTION PAPER BEFORE INSTALLING BASE.

#### A + B + C

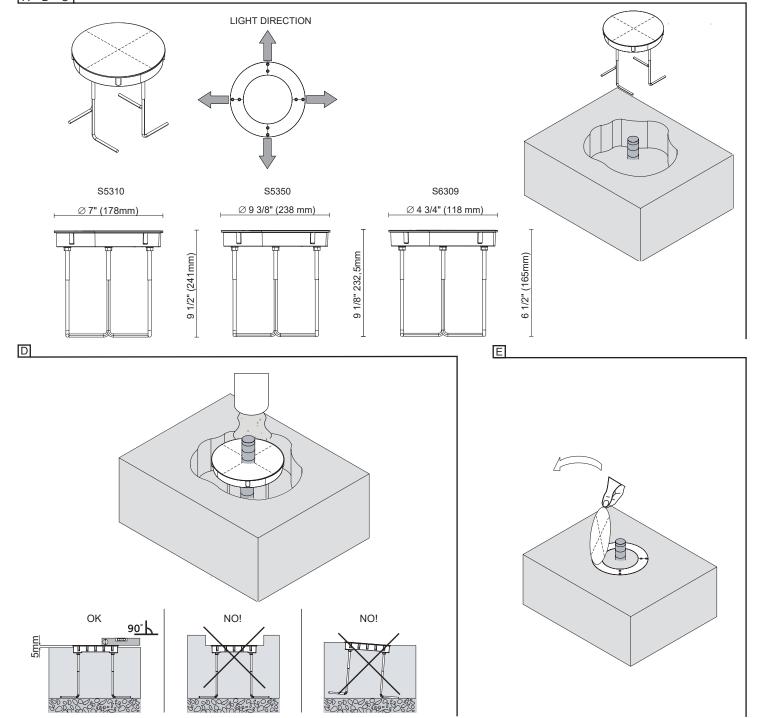


**SISTEMALUX** 


Last update: December 13, 2021

DM - R2


## NEW CONCRETE INSTALLATION PREPARATION (WITH FLANGE ACCESSORY S5310, S5350, S6309)

- F- UNFASTEN THE (4) SCREWS AT BOTTOM OF BOLLARD USING THE ALLEN KEY (INCLUDED).
- G- REMOVE THE BOLLARD BODY FROM THE BOLLARD BASE.
- H- LOWER THE BOLLARD BASE ON THE FLANGE AND FIX IT TIGHTLY WITH APPROPRIATE SCREWS AND WASHERS (NOT INCLUDED)

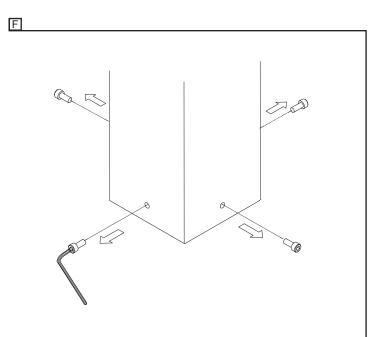

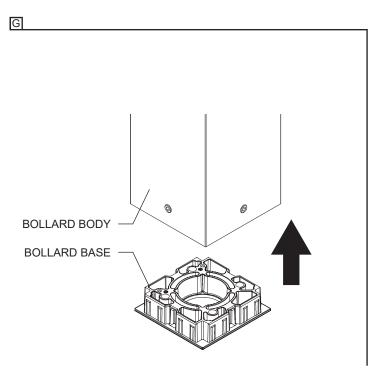



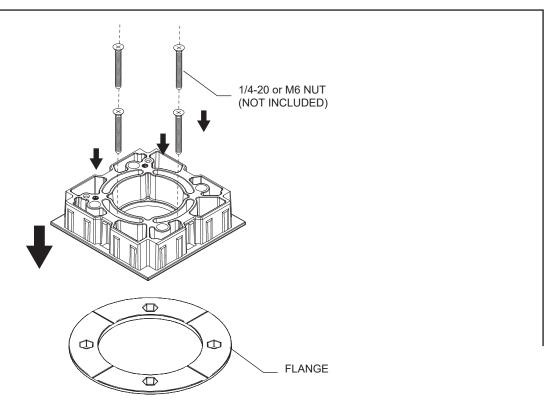

INS-818

Last update: December 13, 2021


DM - R2


# PRE-EXISTING SURFACE INSTALLATION PREPARATION


- A- MAKE HOLE IN CONCRETE SURFACE OR OTHER. USE ANCHORS IF NECESSARY (4X TYP.NOT INCLUDED)
- B- UNFASTEN THE 4 SCREWS AT THE BOTTOM OF BOLLARD USING ALLEN KEY (INCLUDED)
- C- REMOVE BOLLARD BODY FROM BOLLARD BASE


**CONCRETE BASE** 

D- FASTEN BOLLARD BASE TO LEVELED SURFACE USING (4X TYP.) SCREWS (NOT INCLUDED)

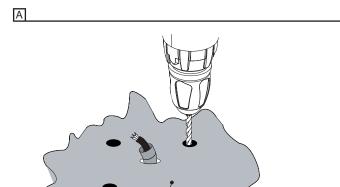

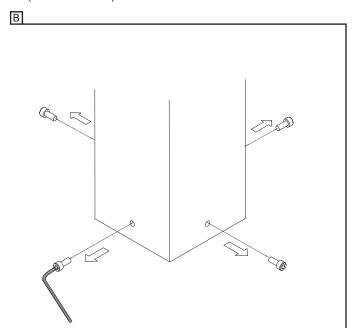

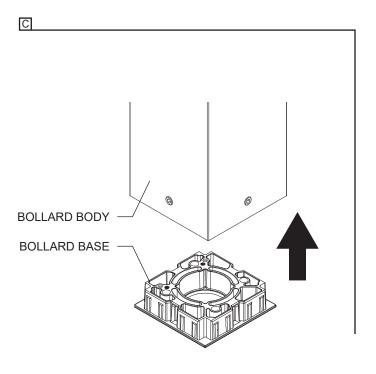

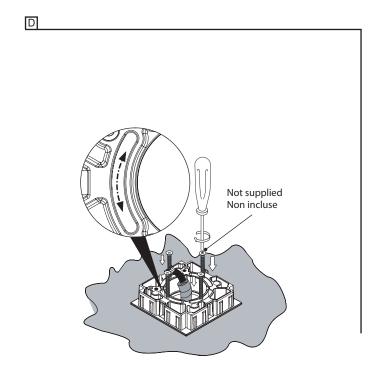

**SISTEMALUX** 


Last update: December 13, 2021



# FIXTURE INSTALLATION INTEGRAL DRIVER 120-277V (UNV) DIMMING 0-10V (D10)

A- MAKE THE NECESSARY WIRE CONNECTIONS (**SEE WIRING DIAGRAM**) USING WATERTIGHT CONNECTORS (**NOT INCLUDED**) B- FASTEN THE BOLLARD BODY BACK ON ITS BASE USING THE (4) SCREWS WITH THE ALLEN KEY (**INCLUDED**).

A+B

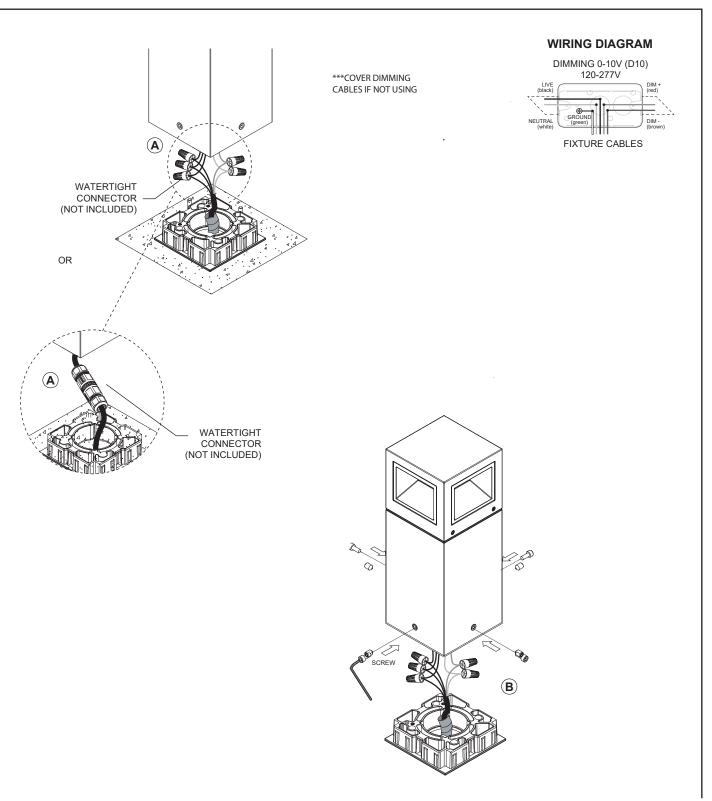

**SISTEMALUX** 

Last update: December 13, 2021