

IMPORTANT - READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES, BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT, AND THE HAZARDS INVOLVED. PROPER GROUNDING IS REQUIRED FOR SAFETY.

REMODEL FIXTURE INSTALLATION REMOTE DRIVER (REM)

A- MAKE THE CEILING CUT-OUT (SEE DIMENSION BELOW).

FOLLOW STEPS B TO D FOR SPOT OPTIC ADJUSTEMENTS.


B- UNSCREW THE (4) COVER RING PHILLIPS SCREWS FROM UNDER THE FIXTURE BODY AND PULL OUT THE GLASS WITH SILICONE GASKET.

C- SET THE FIXTURE OPTIC TO THE DESIRED ANGLE ($\pm 15^\circ$) BY PUSHING ON THE OPTIC NOTCHES.

D- REASSEMBLE THE FIXTURE (**REVERSE STEP B**).

E- INSERT THE (2) PHILLIPS SCREWS (**INCLUDED**) THROUGH THE FIXTURE AND BRACKET (**INCLUDED**).

F- MAKE THE NECESSARY WIRE CONNECTIONS (**FOLLOWING POLARITY MARKINGS**) USING CONNECTORS (**NOT INCLUDED**).

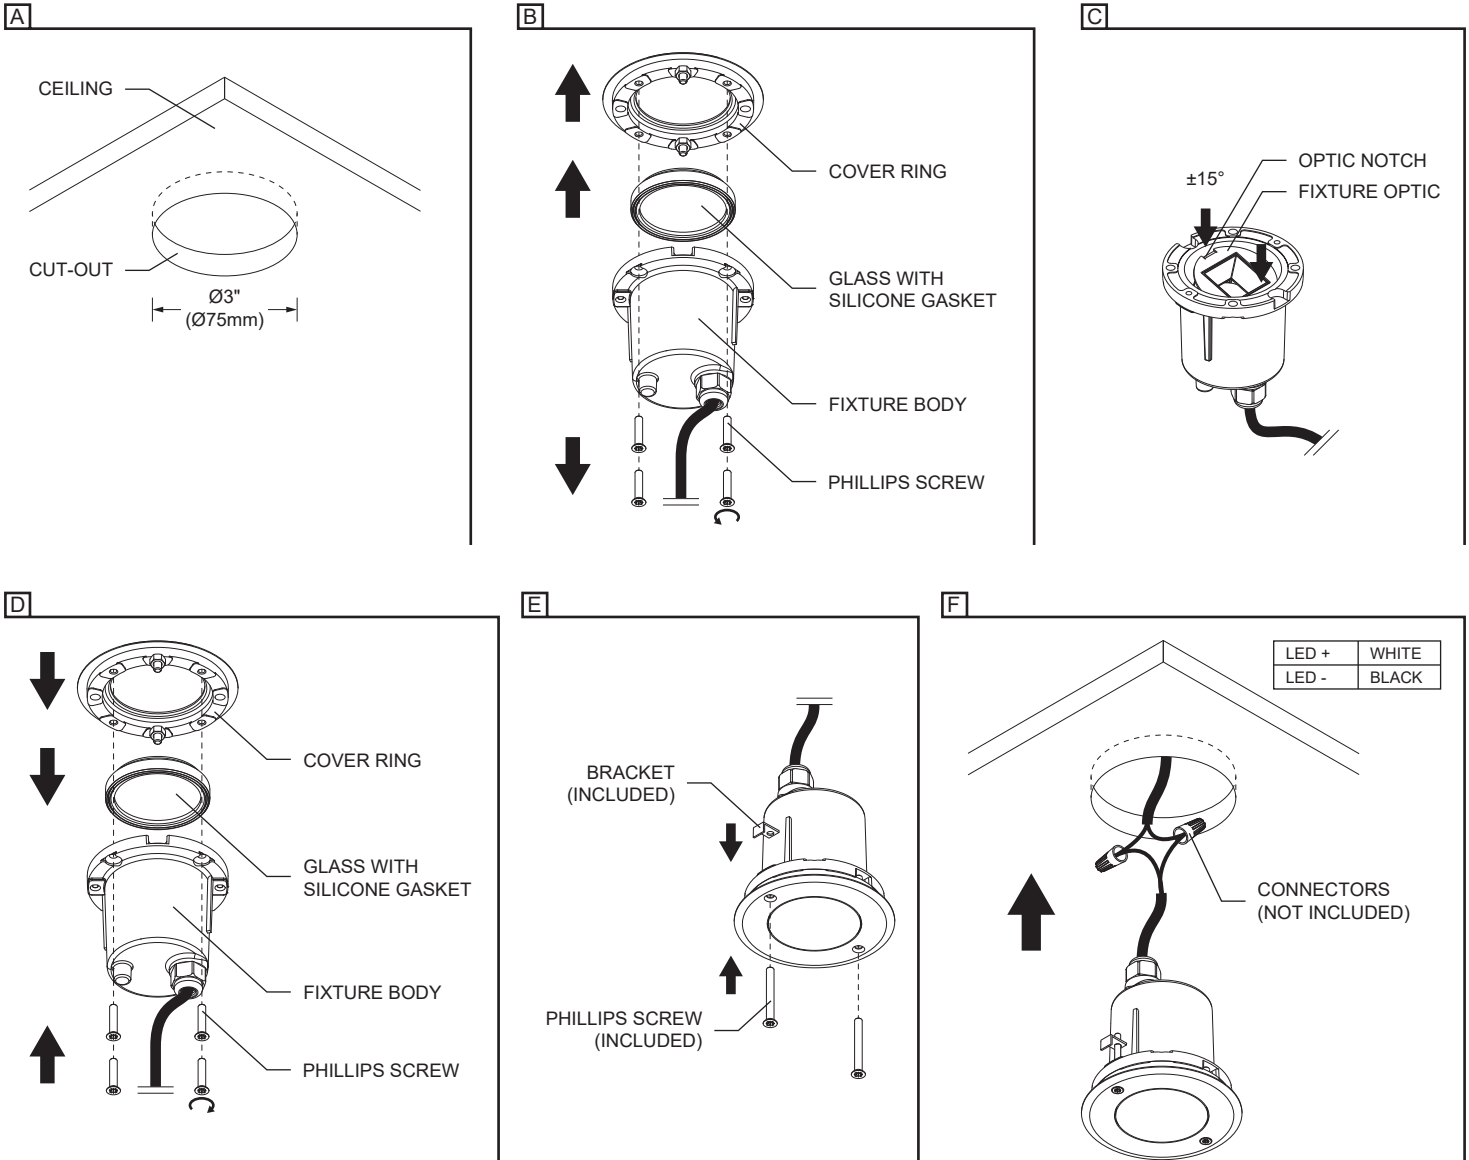

G- TIGHTEN THE (2) COVER SCREWS TO LOWER THE BRACKET UNTIL THE FIXTURE IS SECURELY HELD IN PLACE.

G

